
WALL LAMPS with glass globes


Instalation instructions

If the flexible external cable or the cord of this lamp is damaged, it must be replaced by the manufacturer, his service of maintenance or any person of equivalent qualification to avoid any risk.

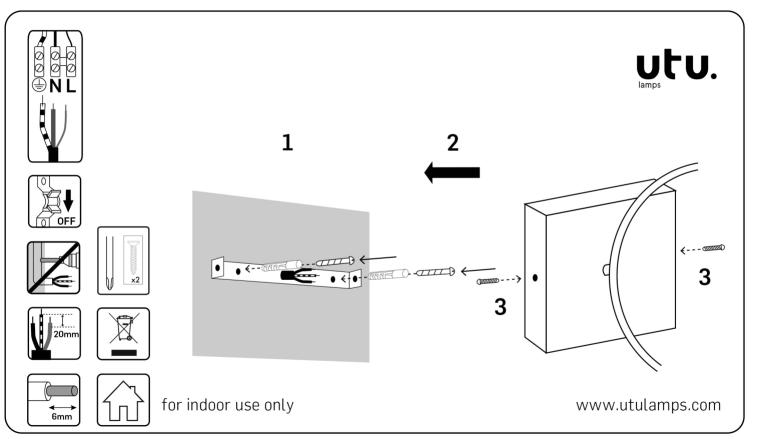

WALL LAMPS with glass globes


If the flexible external cable or the cord of this lamp is damaged, it must be replaced by the manufacturer, his service of maintenance or any person of equivalent Instalation instructions qualification to avoid any risk.

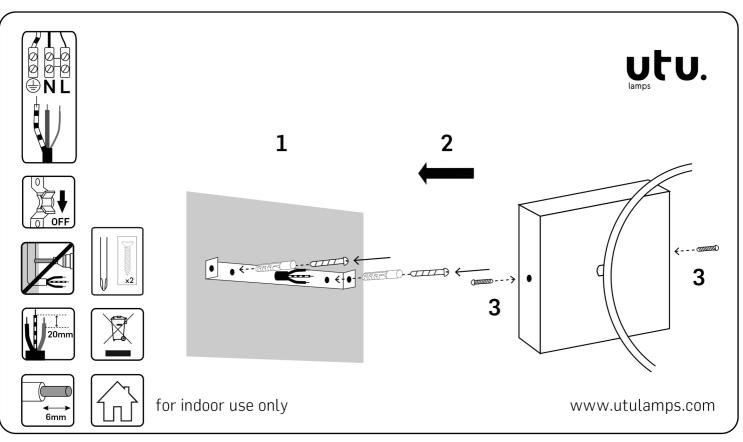

WALL LAMPS with glass globes

Instalation instructions


If the flexible external cable or the cord of this lamp is damaged, it must be replaced by the manufacturer, his service of maintenance or any person of equivalent qualification to avoid any risk.

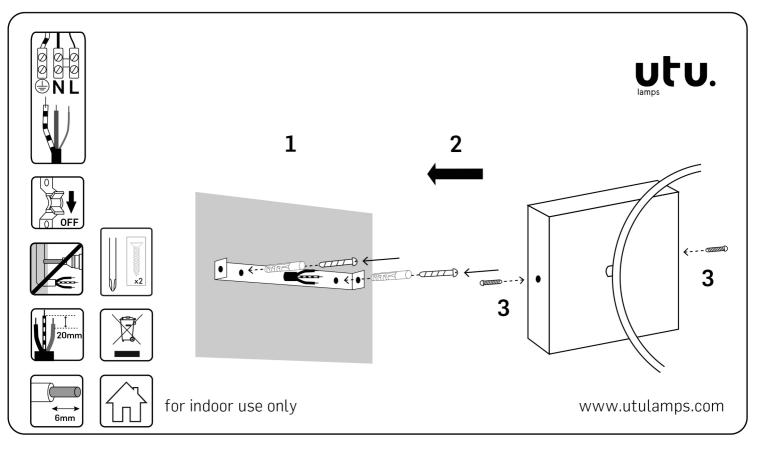

WALL LAMPS

Instalation instructions


If the flexible external cable or the cord of this lamp is damaged, it must be replaced by the manufacturer, his service of maintenance or any person of equivalent qualification to avoid any risk.

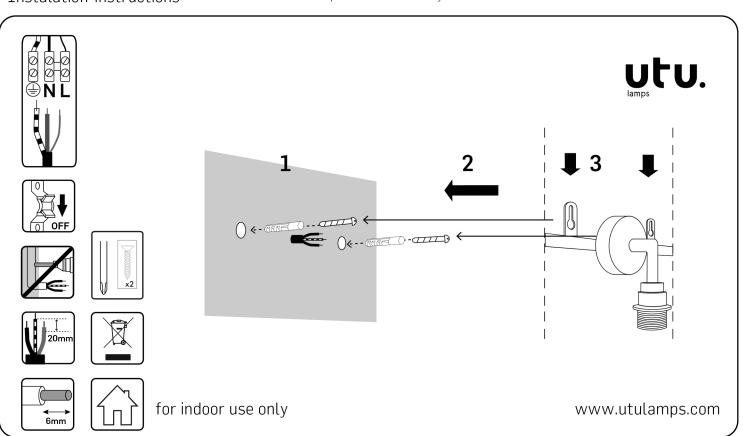

WALL LAMPS

Instalation instructions


If the flexible external cable or the cord of this lamp is damaged, it must be replaced by the manufacturer, his service of maintenance or any person of equivalent qualification to avoid any risk.

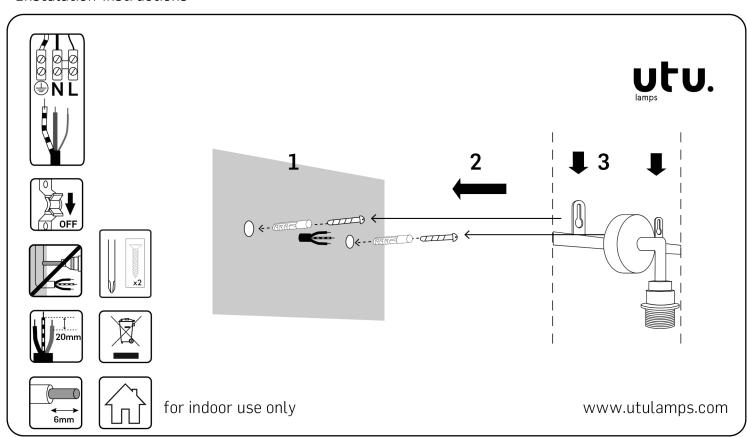

WALL LAMPS with glass globes


Instalation instructions

If the flexible external cable or the cord of this lamp is damaged, it must be replaced by the manufacturer, his service of maintenance or any person of equivalent qualification to avoid any risk.

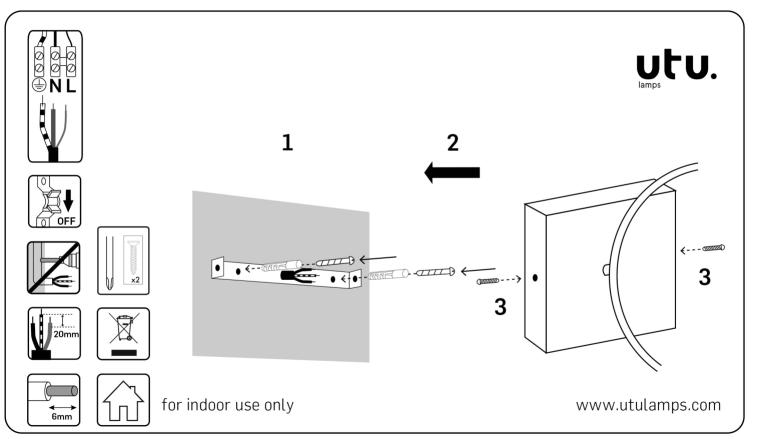


Suspension lamp - frame collection Assembly instructions



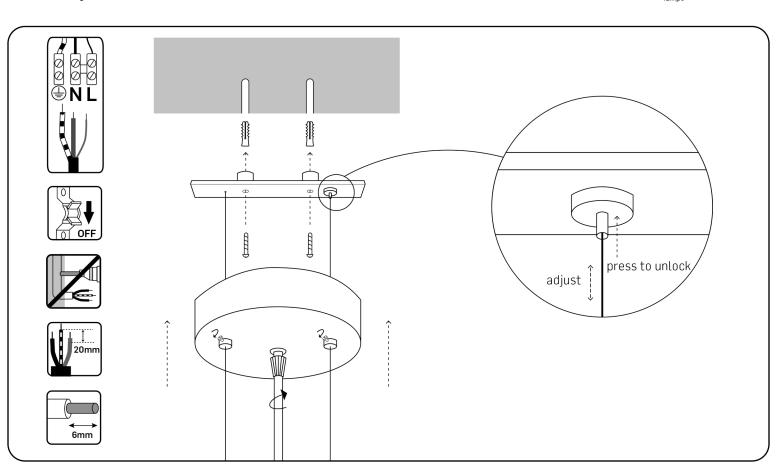


Suspension lamp Assembly instructions



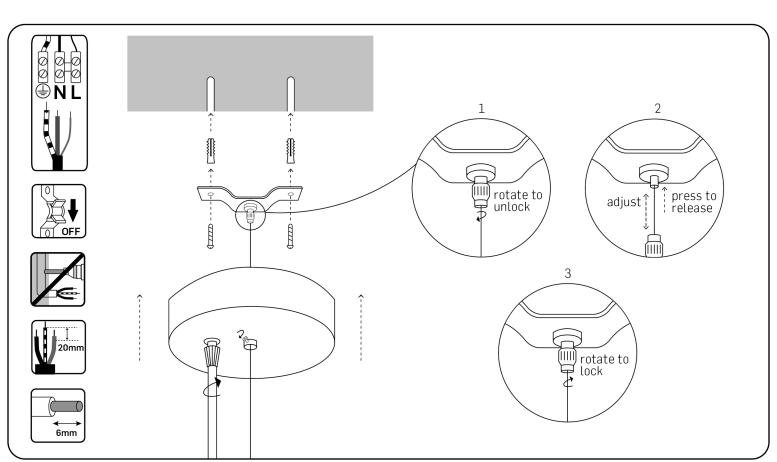


Suspension lamp Assembly instructions




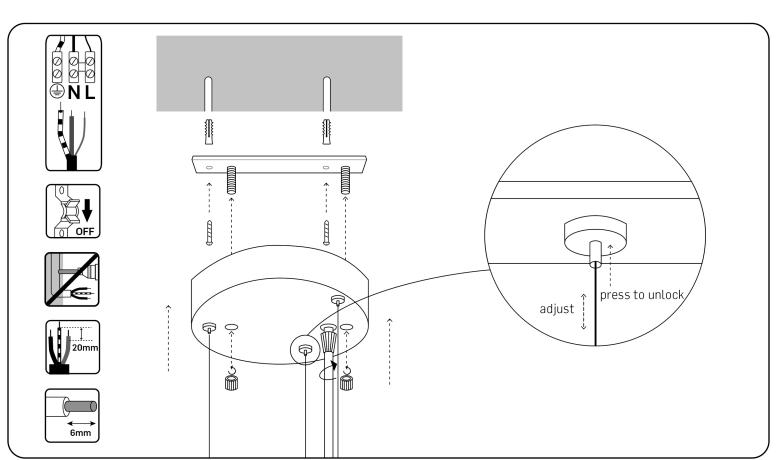


Circus V wall lamp Assembly instructions

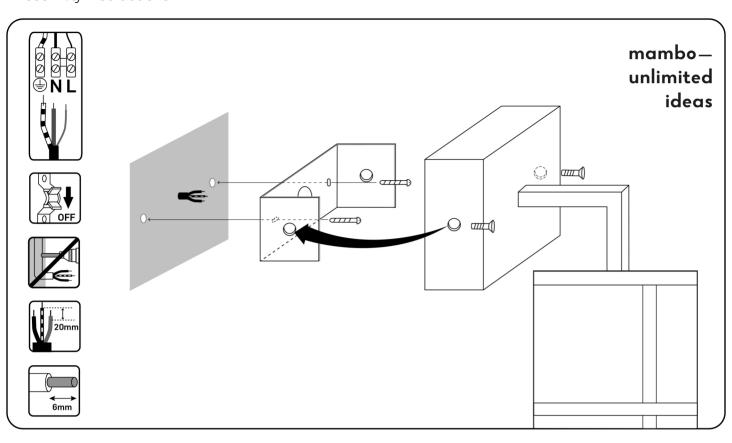

Circus V wall lamp Assembly instructions

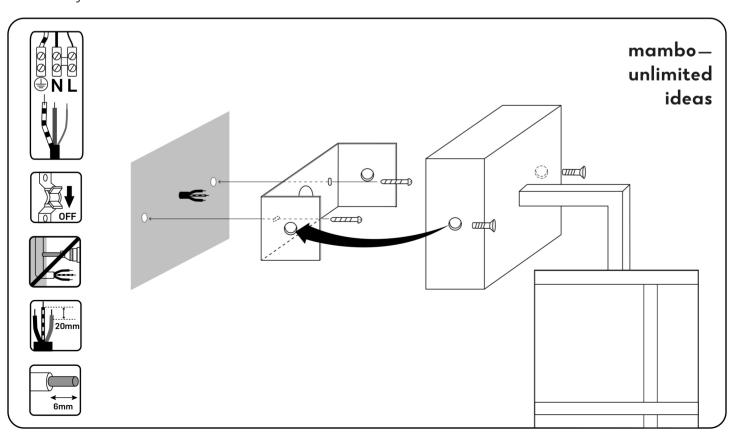

Suspension lampsAssembly instructions

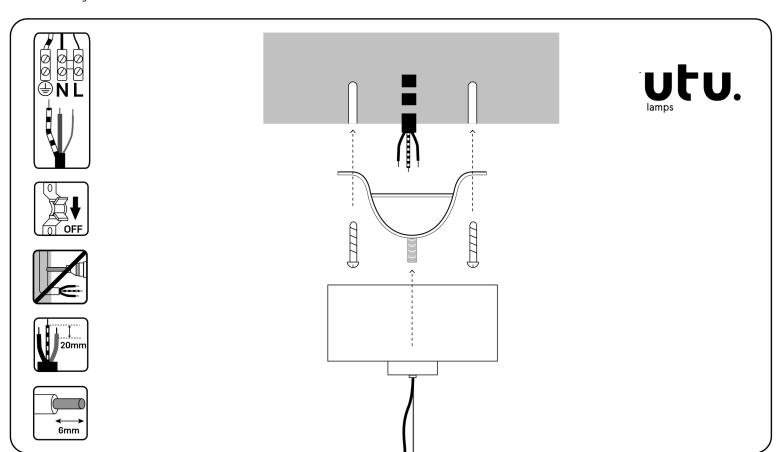

Suspension lamps Assembly instructions

